

Perfect 16 In-Duct Filter Replacement Instructions

» Filter replacement reminders by email!

IQAir's PerfectAir Program helps you maintain the cleanest indoor air by helping you stay on top of replacing your Perfect 16 air filters. Sign up today at www.IQAir.com/PerfectAir




1 First, turn off HVAC System. Access to replace filters is gained from the side panel with finger screws attached to it.




2 Remove all eight finger screws. Turn screws counter clockwise.



3 Remove access panel.

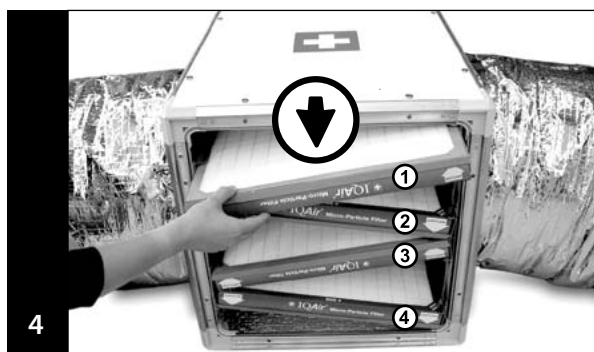

4 Remove filters starting from the top. Dispose or recycle used filters per local laws or regulations.

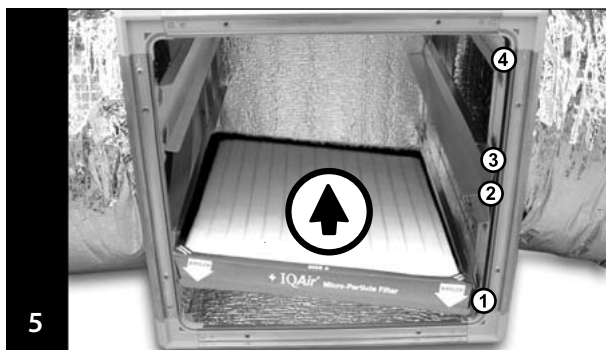

5 Insert new filters starting from the bottom.



6 Ensure that you align the filters with the airflow arrows matching the airflow arrows on the cabinet.



7 Double check that all filters have been inserted correctly and replace access panel with screws.



8 Fill out the filter replacement label with date of current filter replacement. Affix sticker to outer panel. (With average use, filters last up to 3 years based on 50% HVAC usage.)